

ELECTRO BEAR GUARD ULTRALITE INSTRUCTIONS

1. INSTALL 2 WHITE PIG-TAIL INSULATORS ONTO POSTS FROM BOTTOM END OF POST BY TWISTING THE ENDS AT THE SPIRAL PART OF THE INSULATOR AND SLIDING THEM UP THE POST. SLIDE THE CHARGER HOLSTER ON THE GATE POST USING THE LOOP ON THE HOLSTER. PLACE THE EXTRA INSULATOR ON THE POST UNDER THE HOLSTER FOR SUPPORT. KEEP THE EXTRA INSULATOR 4" BELOW THE LOWER POLYWIRE.

2. AFTER INSTALLING 2 INSULATORS PER POST, ONE AT THE TOP AND THE SECOND ONE HALF WAY DOWN THE POST, FACE THE PIG-TAIL TO THE INSIDE OF THE FENCE. PUSH POSTS INTO THE GROUND 4" TO 6". IF THE GROUND IS TOO HARD OR ROCKY, USE THE GROUNDING ROD TO MAKE A HOLE FOR THE POSTS.



DO NOT FORCE POSTS SIDE TO SIDE IN THE GROUND AS THIS COULD CAUSE THEM TO BREAK.

STRING 2 POLYWIRES BETWEEN THE POSTS AND HOOK THEM TO THE PIG-TAIL OF EACH INSULATOR. SPACE POSTS NO MORE THAN 20 FEET APART.

SEE ILLUSTRATION 1

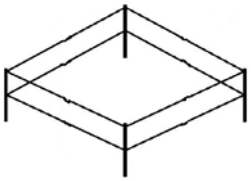


Illustration 1

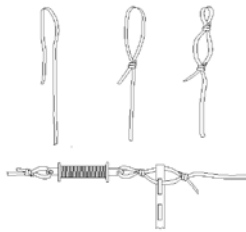


Illustration 2

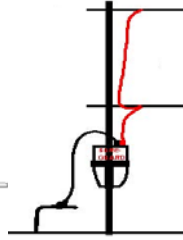


Illustration 3

3. TAKE ONE END OF THE POLYWIRE AND MAKE A 6" LOOP. TIE 2 KNOTS ONE AS CLOSE TO THE STANDING END AND ONE BACK TOWARDS THE LOOP. THE LOOP SHOULD BE BIG ENOUGH THAT THE HOOK ON THE YELLOW GATE HANDLE WILL FIT INTO IT. THE OTHER LOOP IS PLACED ON THE LOOP OF THE INSULATOR AT THE POST WHERE YOU WANT THE GATE TO BE, REPEAT THIS ON SECOND POLYWIRE. SEE ILLUSTRATION 2

4. PUSH ALUMINUM GROUNDING ROD INTO GROUND AS FAR AS POSSIBLE LEAVING THE HANDLE EXPOSED. INSERT ONE END OF THE BLACK CONNECTOR WIRE INTO HOLE ON GROUNDING ROD. CONNECT THE FURTHEST ALLIGATOR CLIP FROM THE CHARGER TO THE TOP WIRE AND THE MIDDLE ALLIGATOR CLIP TO THE BOTTOM WIRE. INSERT THE BLACK PIN CONNECTION INTO THE BLACK CONNECTION ON THE CHARGER. INSERT THE RED PIN CONNECTION INTO THE RED CONNECTION ON THE CHARGER.

5. INSTALL 2 AA BATTERIES INTO THE CHARGER. THE CHARGER LIGHT WILL COME ON AND STAY ON AS LONG AS THE BATTERIES ARE INSTALLED. INSERT CHARGER INTO THE HOLSTER INSTALLED ON THE POST. SEE ILLUSTRATION 3 TURN THE CHARGER ON BY PRESSING THE FRONT WHERE IT SAYS "PRESS". THE FENCE LIGHT ON THE FACE OF THE CHARGER SHOULD COME ON AND A FAINT NOISE SHOULD BE HEARD FROM THE CHARGER. PRESS THE SAME BUTTON TO TURN THE UNIT OFF BEFORE TAKING DOWN THE FENCE AND PACKING IT AWAY. TO SAVE BATTERY LIFE, TURN FENCE OFF WHEN NOT NEEDED.



WARNING: KEEP ITEMS AT LEAST 3 FEET AWAY FROM FENCE, SO A BEAR CANNOT REACH THEM. THE POLYWIRE CANNOT TOUCH VEGETATION OR THE POSTS. ANYTHING TOUCHING THE WIRE OTHER THAN THE INSULATORS AND ALLIGATOR CLIP COULD GROUND THE FENCE, RENDERING IT INEFFECTIVE. SEE ADDITIONAL WARNING ON BACK OF CARD.

The Kit;

List of parts in package for EGB-UltraLite

- 1 - battery powered fence energizer, part# EBG-110
(2 - AA batteries not included)
- 4 - 40" long collapsible Aluminum fence posts part# EBG-316486
- 2 - 80' polywire fence wire part# EBG-R490
- 9 - fence post wire insulators part# EBG-F3P
- 2 - gate handles part# EBG-GPL
- 1 - energizer holster part# EBG-CH
- 2 - wire jumpers part# EBG-JWS
- 1 - 3/8" aluminum ground rod part# EBG-ALRB38
- 1 - carry bag part# EBG-BAG-LITE
- 1 - 10' orange flagging part# EBG-FT

Warning: This product produces up to a 9,500 volt pulsed shock to anything that comes into contact with the fence wire. This includes people and pets. A shock to someone with a heart condition or to the neck or head area could be harmful.

Anyone that will be exposed to this product while energized should be made aware of the danger.

Note: This electric fence system is not 100% guaranteed to deter all bears. Although tests have been performed by a bear biologist and were all positive, several factors could cause the fence not to be effective. Eagle Enterprises, Inc. will not be held liable for personnel injury and or property damage that may occur from anyone using this electric fence system. Eagle Enterprises, Inc. full disclaimer can be viewed on the internet at www.electrobearguard.com.

Manufactured by
EAGLE ENTERPRISES, INC.
5849 Old Seward Hwy
Anchorage, ALASKA 99518
Phone: 907-562-2331